

# **TO OPERATE CLOCK**

## **BLINKING DISPLAY/ PM INDICATOR/ ALARM ON INDICATOR**

When the clock is plugged in, the display will blink on and off meaning the incorrect time is being displayed. You should always check the time when this is indicated. The clock will automatically indicate AM/PM, but you must be sure to set the indicator for the time and alarm correctly. When the P< indicator is on, it is “PM”, when it is off, it indicates “AM”. When the Alarm indicator is on, the alarm will sound at the time set.

## **SET TIME**

Press the time button and the hour button until the correct hour is displayed (and the AM/PM is correct), then release the Hour button and press the Minute button until the correct minute is displayed.

## **SET ALARM**

Press and hold the alarm button and the hour or minute button as about. Be sure to set the AM/PM properly too.

## **TO OPERATE ALARM**

Slide the alarm ON/OFF switch to ON position. The alarm will sound at the time set. To shut off the alarm, slide the alarm ON/OFF switch to OFF position, Slide the alarm HI/LOW switch, set alarm to HI for loud alarm or too LOW for normal alarm.

## **SNOOZE**

Press the snooze button and get an extra 8~9 minutes of sleep.

## **BATTERY BACK UP**

Insert the 9V battery into the battery compartment on the back-side of the clock. The battery will hold the ALARM and TIME settings until power is restored. If there is no battery and the power is interrupted, the display will flash and the ALARM and the TIME will need to be reset.

## **MAINTENANCE**

A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.